

IMPRIMO® Clean

Completely clean.

Cleaning unit for gentle cleaning of 3D printed objects.

The IMPRIMO® Clean creates a circular flow in the cleaning solution to reduce the risk of microcracks in the object surface, thus increasing its quality. Different cleaning programs allow for precise matching with the selected material class and choice of the cleaning agent. The easy removable insert enables quick and clean replacement of the cleaning solution.

Technical data:

Power: 70 W

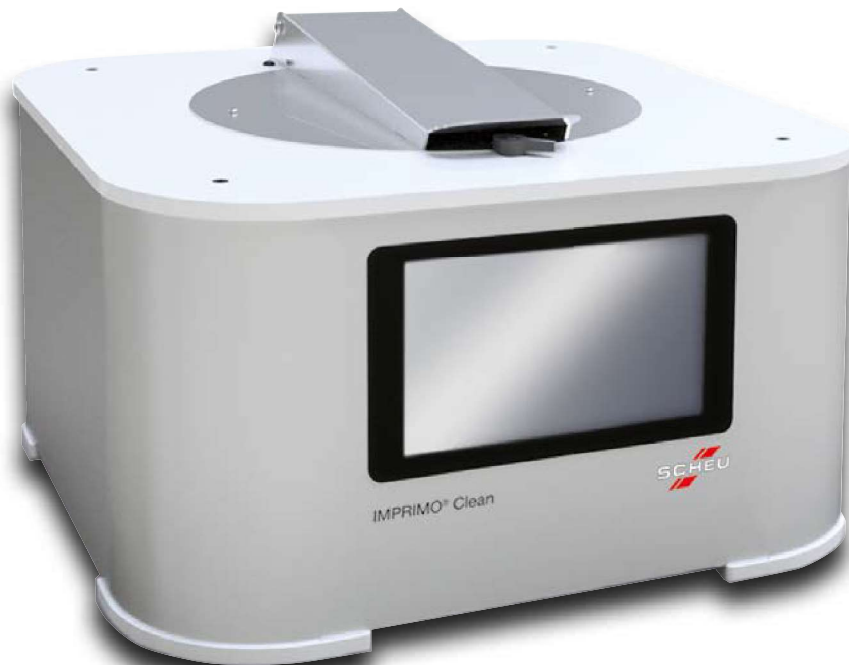
Dimensions: 404 x 404 x 240 mm

Cleaning chamber: 140 x 140 x 100 mm (4 l capacity)



Software: Linux OS

Network compatibility: Wifi, Ethernet

Touch panel: 7"



Delivery program

 IMPRIMO® Clean	1 piece	6534
 IMPRIMO® Cleaning liquid	1l	6533